


USE THIS INSTALLATION PROCEDURE ALONG SLOPE CHANGES, REGARDLESS WHETHER ENGLERT H/T UNDERLAYMENT IS OVER ENTIRE ROOF or ONLY ALONG PERIMETERS.

WHEN SLOPE IS LESS THAN 3:12, CONSULT ENGLERT TECHNICAL DEPARTMENT.

- 1) MEASURE 12" DOWN FROM SLOPE CHANGE AND MARK.
- 2) CUT ONE 36" WIDE PIECE OF UNDERLAYMENT IN HALF TO CREATE 18" STRIPS.
- 3) PLACE ONE 18" STRIP BELOW LINE MARKED IN STEP #1.
- 4) SHINGLE LAP 36" WIDE PIECE OVER EDGE OF LOWER STRIP AND UP ROOF.
- 5) SHINGLE LAP THE OTHER 18" STRIP OVER EDGE OF 36" PIECE TO FINISH. MAXIMIZE SLOPE CHANGE COVERAGE.
- 6) WHEN NECESSARY, END LAP UNDERLAYMENT BY 6" MINIMUM.

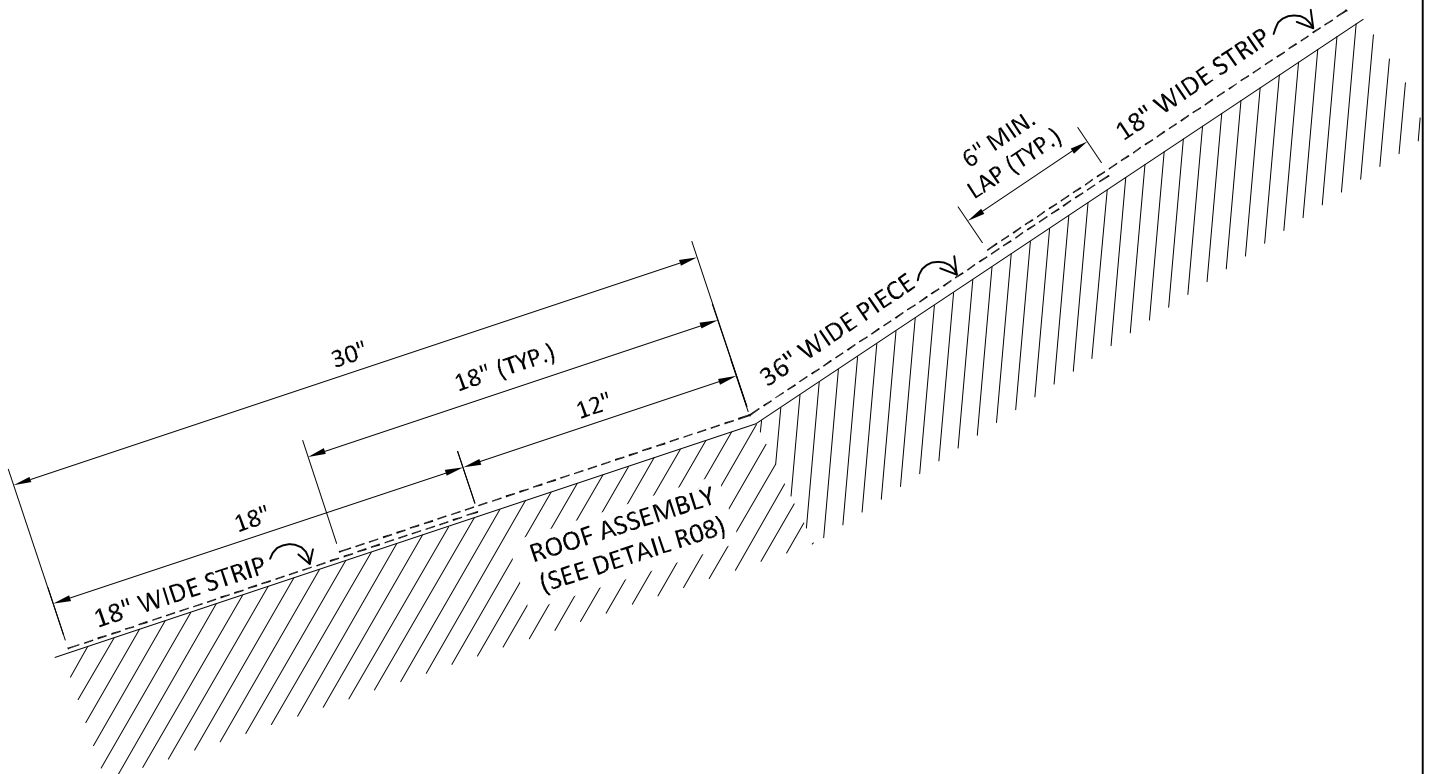

**ENGLERT**<sup>™</sup>  
 www.englertinc.com  
 800-364-5378

GENERIC BEST PRACTICE ASSEMBLY SHOWN. WATERTIGHTNESS WARRANTY NOT IMPLIED. WHEN SITE CONDITION DIFFERS, SPECIFIC ENGINEERING NECESSARY.

**ROOF TRANSITION**

---

**PITCH BREAK UNDERLAYMENT**

DETAIL SUBJECT TO CHANGE WITHOUT NOTICE.

Detail #  
**R34**