






MicroGuard Installation Information

1. Assemble gutter complete, install MicroGuard on the ground prior to gutter installation. Apply 90 degree bend over back part of gutter. While holding MicroGuard section in place install two zip screws on back next to gutter hanging bracket.




2. Place second section on gutter and slide pieces together using notches to align holes properly. Add two screws on back side of gutter as in step one. Repeat this process through the entire assembly.

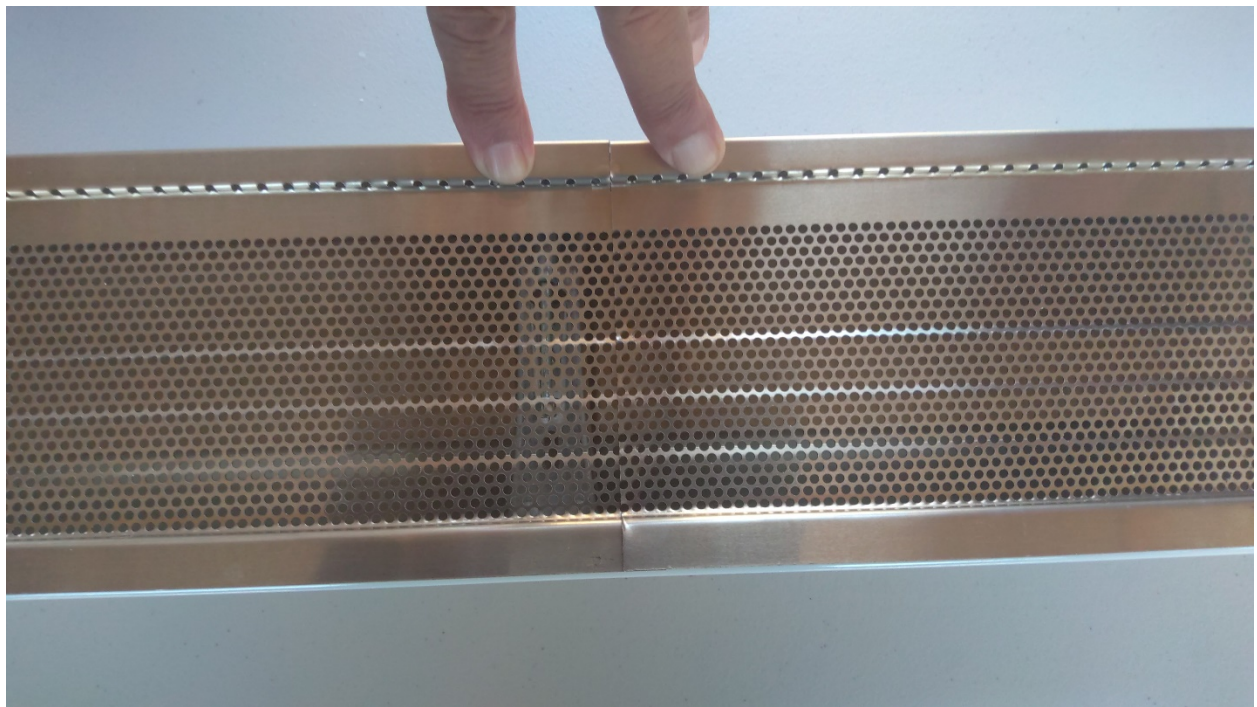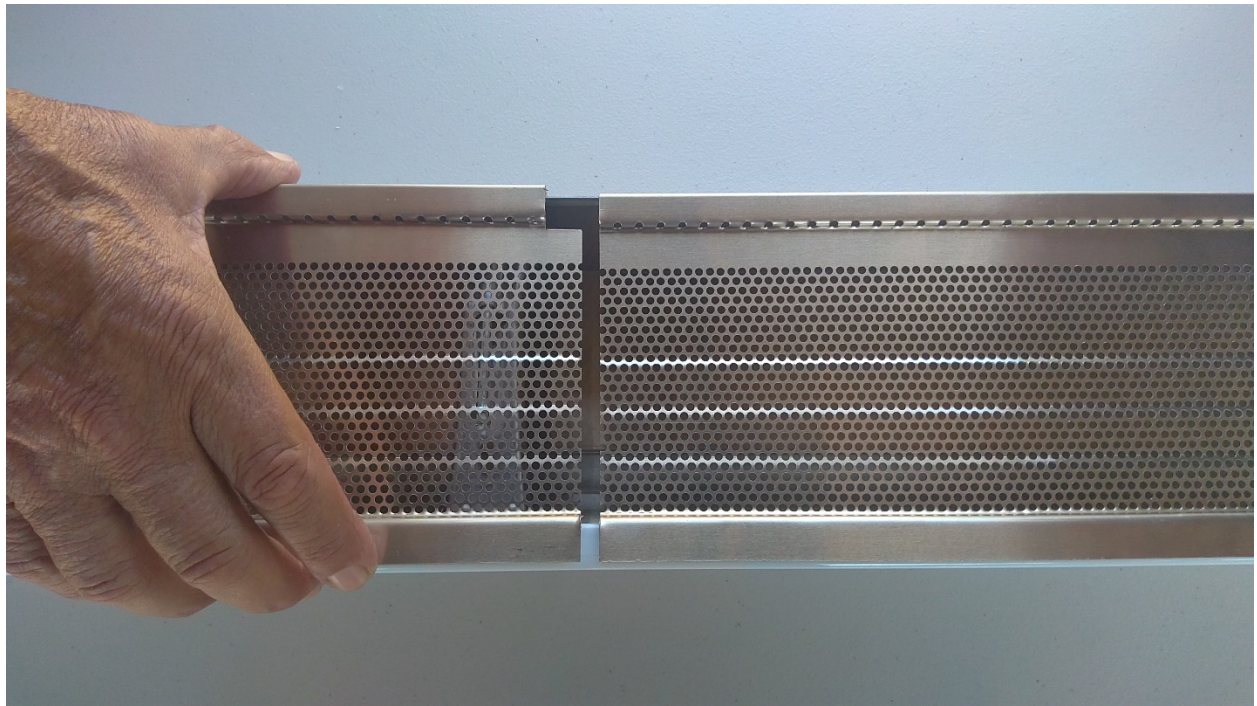


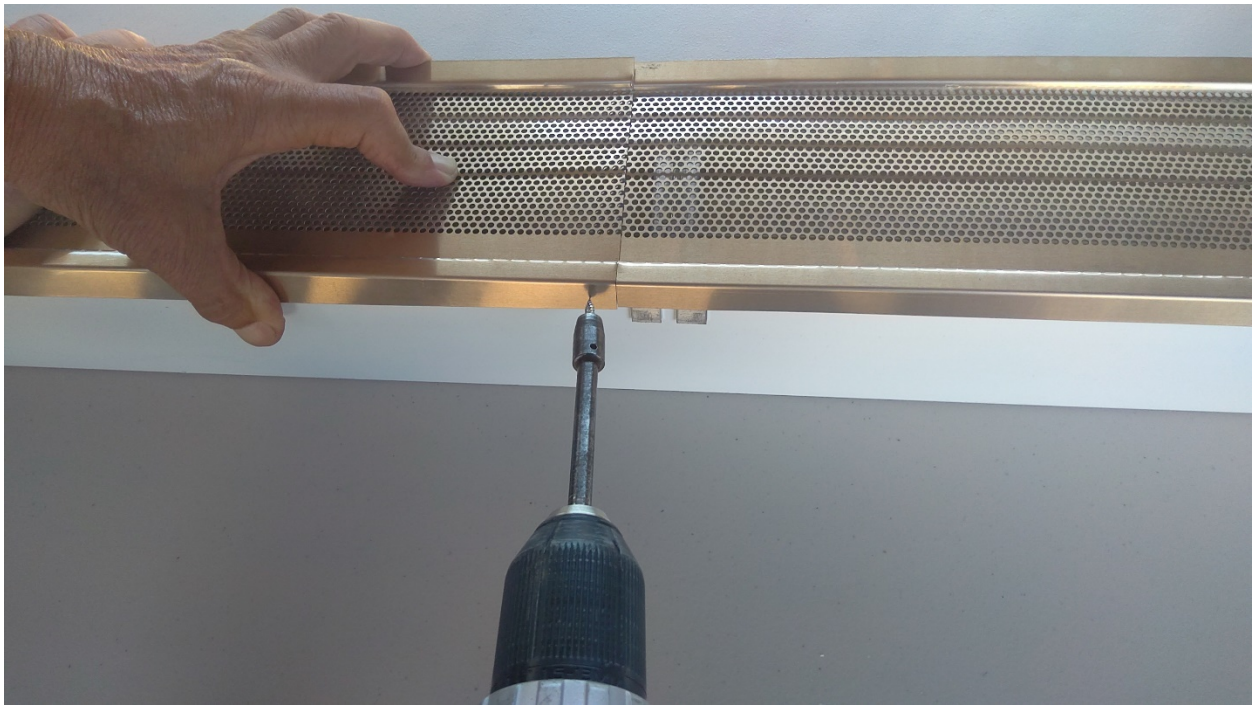


3. At end cap, cut the tabs to approximately 1" back in order to fold the end down into the gutter and behind the end cap. Refer to A, B, C as shown.
 - a.

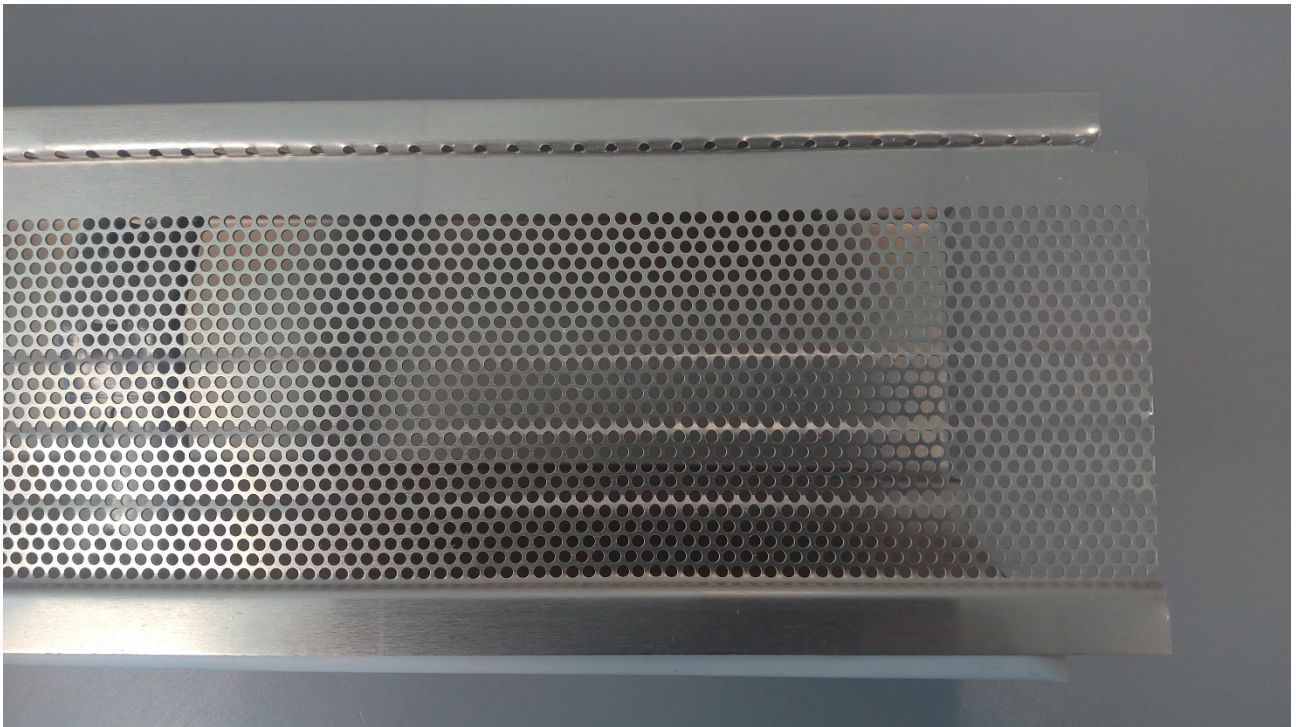


b.

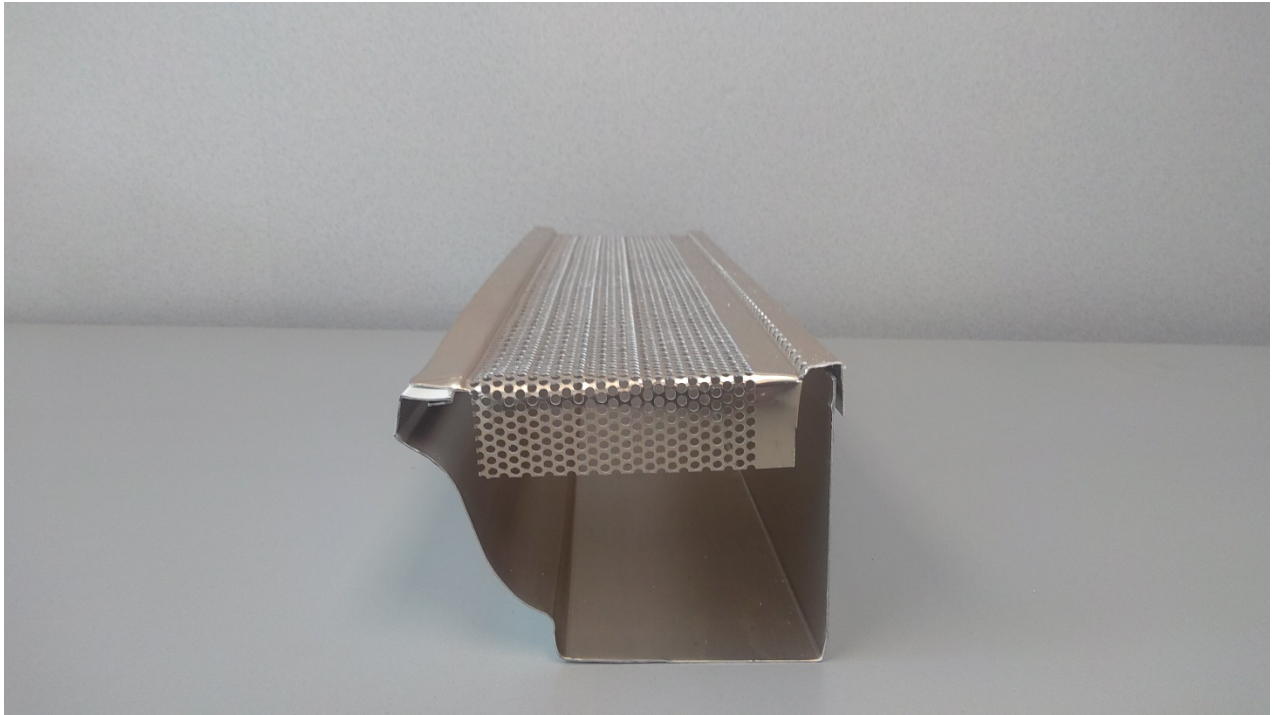

c.

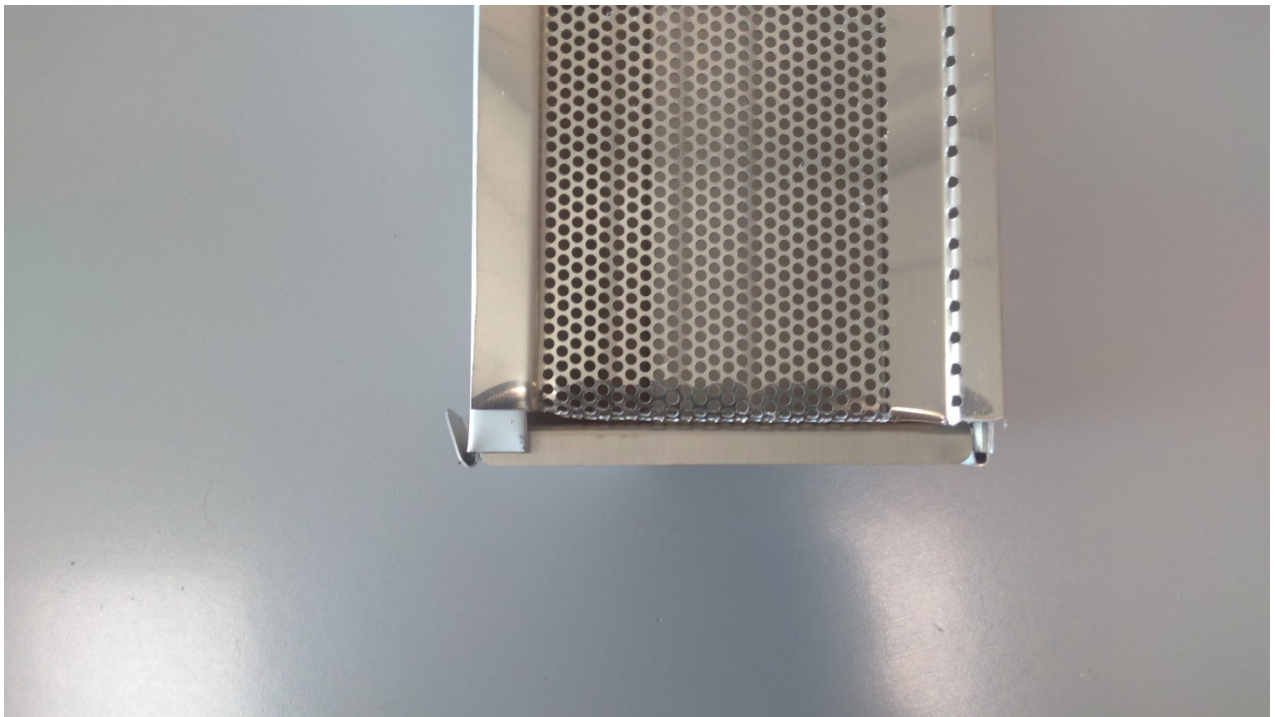


4. Install gutter on building. Once installed, secure front of MicroGuard to top front of gutter as shown, one screw at each overlap and three evenly spaced between.

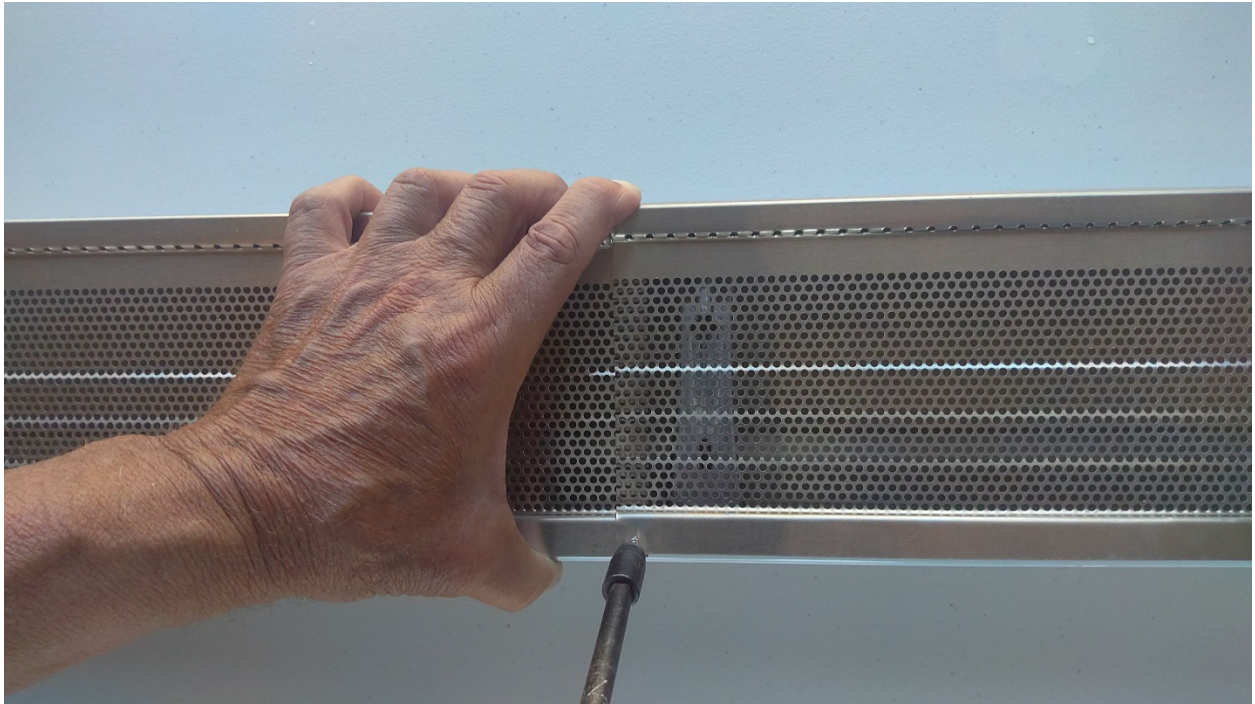


5. Miter corner angle cut required as shown.




6. Note: Available for both five and six inch gutter systems. Three options to choose from: standard, flat, and reverse bend. MicroGuard can be used on new and existing gutter systems. Call your local Englert sales rep for details.

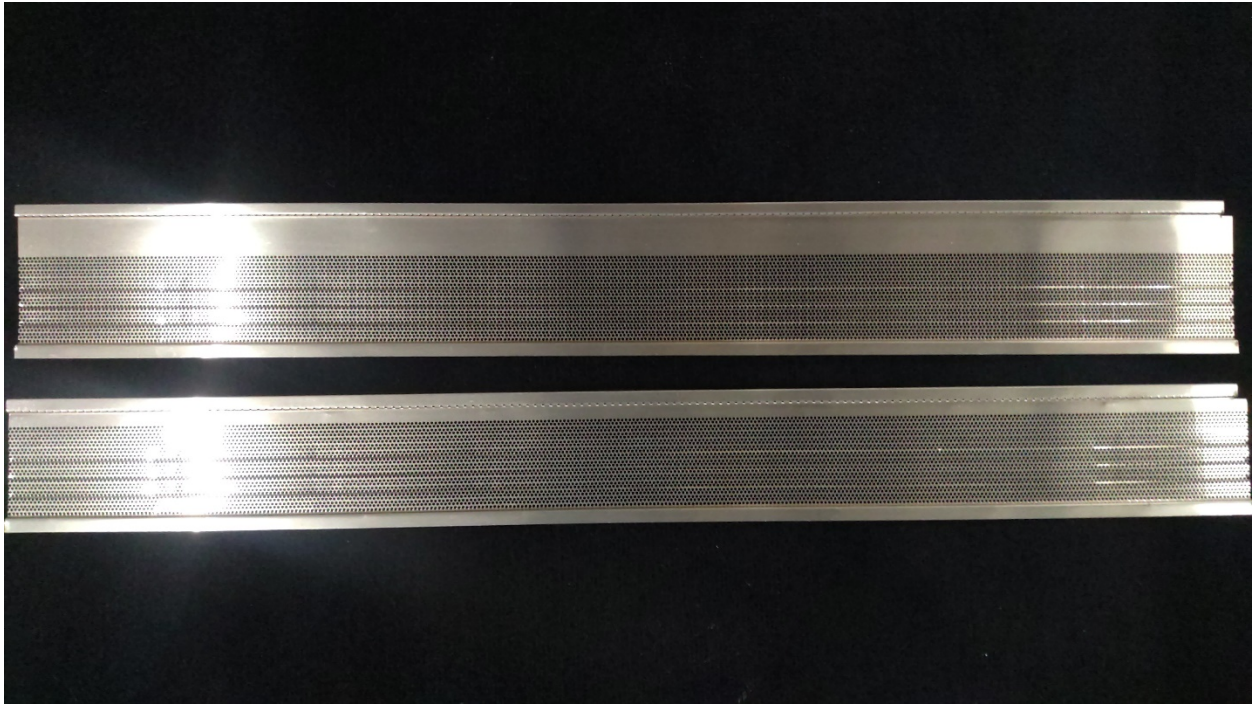

Standard MicroGuard Available in 5" and 6"

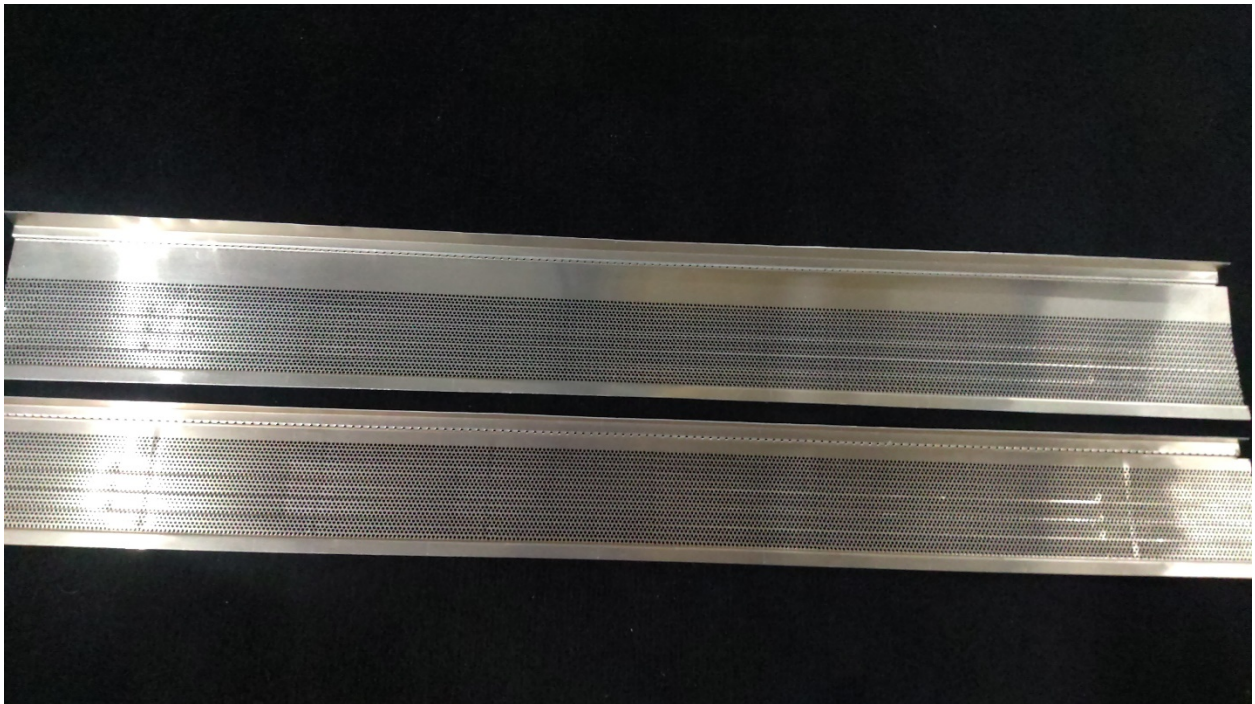

Reversed-bend MicroGuard Available in 5" and 6"

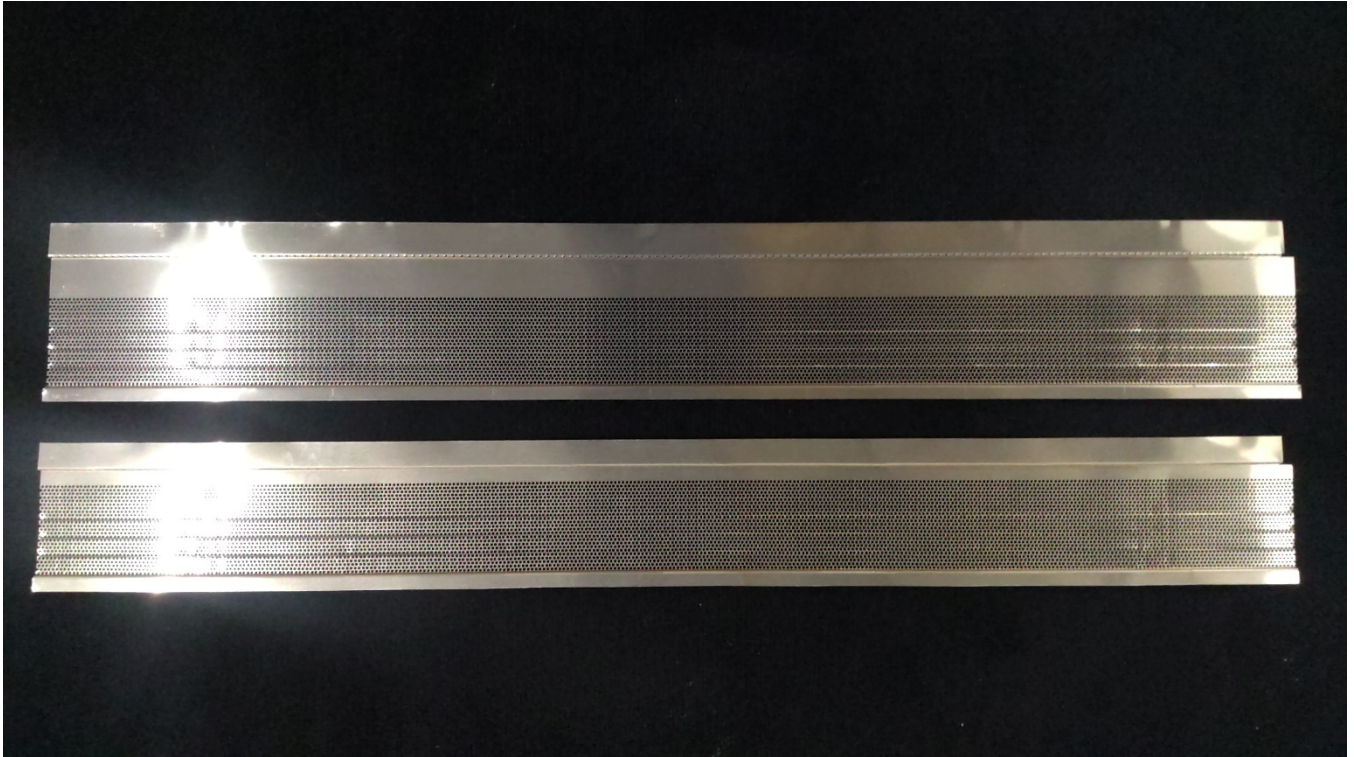

Flat MicroGuard Available in 5" and 6"